

TABLE OF CONTENTS

Section 1	General Information	
	Introduction	1
	Description	1
	Safety Labels and Instructions	2
	Gauge Colour Code	3
	Gauge Alarm Parameters	3
	General Arrangement	5
	Specifications	6
	Lubrication and Fuel Specifications	
	General	8
	Fuels	8
	Fuel Specification Table	8
	Fuel Additives	9
	Diesel Fuel Relevant Information	10
	Engine Oil	11
	Torque Converter/Transmission Fluid	11
	Hydraulic Oil	11
	Gear Oil	11
	Multi Purpose EP Grease	11
	Drive Coupling Grease	12
	Exhaust Conditioner Make Up Tanks	12
	Fluid Specification Table	13
	Grease Point Reference Drawing	14
	Machine Isolation	
	Engine Isolation	15
	Pneumatic Isolation	16
	Hydraulic Isolation	17
	Engine Coolant Isolation	18
	Electrical Isolation	18
	Articulation Isolation	19
	Lift Arm Isolation	20
	Exhaust Conditioner Isolation	21
	General Safety and Precaution	
	General	22
	Packing and Supporting the Machine	25
	Maintenance Schedules	26
	10 Hours—Daily Off Line Mechanical Inspection	28
	50 Hours—Weekly Off Line Mechanical Inspection	38
	250 Hours—3 Months Off Line Mechanical Inspection	48
	500 Hours—6 Months Off Line Mechanical Inspection	58
	1000 Hours—12 Months Off Line Mechanical Inspection	68
	2000 Hours—2 Yearly Off Line Mechanical Inspection	78
	5000 Hours—5 Yearly Off Line Mechanical Inspection	90
	10000 Hours—10 Yearly Off Line Mechanical Inspection	102
	Recommended Bolt Torque	114
Section 2	Engine System	
	Fuel System	
	General Description	115
	Safety Precautions	116
	Fuel Tank	117
	Fuel Lines	117



Section 2

Engine System (cont.)

Fuel System	
Primary Fuel Filter/Water Separator.....	118
Secondary Fuel Filter	120
Fuel System – Priming	121
Lubrication System	
General Description.....	122
Safety Precautions	123
Oil Filter	124
Checking/Filling Engine Oil	125
Changing Engine Oil	125
Flushing the Lubrication System	126
Air Intake System	
General Description.....	127
Safety Precautions	127
Air Cleaner/Indicator Assembly	128
Emergency Intake Shutoff Valve	129
Inlet Flame Trap/Flameproof Joints.....	130
Servicing Air Intake System	131
Cooling System	
General Description.....	133
Safety Precautions	133
Engine Package	134
Expansion Tank.....	135
Header Tank.....	135
Fan Assembly.....	136
Water Pump Belt Tension	137
Radiator.....	138
Checking/Filling and Flushing Coolant System	140
Flushing a Contaminated Cooling System	141
Exhaust System	
General Description.....	142
Safety Precautions	143
Exhaust Downpipe/Purifier	143
Exhaust Make Up Tanks	145
Exhaust Conditioner	146
Exhaust Outlet Flame Trap	150
Flame Paths or Fixed Connections	151
Exhaust Emission Testing Procedure	151
Throttle Control	
General Description.....	153
Safety Precautions	153
Cable Adjustment	154
Engine System Trouble Shooting	155

Section 3

Transmission and Drive Train

Engine Drive Coupling	
General Description.....	161
Safety Precautions	163
Checking and Greasing Drive Coupling	164
Removal and Installation of Drive Coupling	165

Section 3	Transmission and Drive Train (cont.)	
	Transmission and Torque Converter	
	General Description.....	166
	Safety Precautions	168
	Checking/Filling the Transmission Oil	169
	Changing the Transmission Oil Filter Element	170
	Changing the Transmission Oil	171
	Troubleshooting Guide	172
	Service Data	174
	Front and Rear Axle	
	General Description.....	177
	Safety Precautions	177
	Checking/Filling the Planetary Wheel End Oil Level	178
	Checking/Filling the Axle Centre Oil Level	179
	Changing the Oil In Axle Centres, Wheel Ends, and Liquid Cooled Brakes	180
	Checking Wear of the Posi-Stop Brake Assemblies.....	182
	Drive Lines	
	General Description.....	183
	Safety Precautions	184
	Greasing and Inspecting Drive Lines.....	185
	Removing and Installing the Rear Drive Line	185
	Removing and Installing the Front Drive Line.....	186
	Removing and Installing the Upper Drive Line	187
	Wheel and Tyre Assemblies	
	General Description.....	188
	Safety Precautions	188
	Removal	189
	Installation	190
Section 4	Hydraulic System	
	General Description	189
	Safety Precautions.....	190
	Hydraulic Isolation	191
	Pumps and Mountings	
	Steering/Brake Pump	192
	Main Hydraulic Pump	195
	Auxiliary Hydraulic Pumps.....	196
	Hydraulic Tank	
	Checking and Filling Hydraulic Oil.....	197
	Changing Hydraulic Oil.....	198
	Checking and Cleaning Filler Neck Screen	199
	Checking and Replacing Return Filter	200
	Steering and Brake Hydraulic Manifold	201
	Steering/Brake Pump Pressure Filter	205
	Steering Circuit	
	Steering Accumulator	207
	Steering Control Valve.....	208
	Brake Circuit	
	Brake Accumulator	209
	Brake Valve	210
	Brake Heads.....	214
	Control Levers	215
	Main Control Valve Bank	217

Section 4	Hydraulic System (cont.)	
	Tilt and Lift Circuits	219
	Winch and PTO Circuits	220
	Alternator Circuit and Cooling Fan Circuit	222
	Hydraulic Schematic	223
 Section 5	 Electrics, Instruments and Controls	
	Electrical System	
	General Description	225
	Safety Precautions	225
	Alternator, Lights and Hour Meter General Arrangement..	226
	Electric Lighting Components	227
	Engine Service Hour Meter	229
	Electrical System Troubleshooting	231
	Alternator and Drive Assembly	
	General Description	232
	Safety Precautions	232
	Alternator Assembly	232
	Alternator Drive Assembly	233
	Diesel Control System (DCS)	
	General Description	234
	Power Supply	234
	Display Illustrations	235
	Display Assemblies	245
	General Arrangement	246
	Switches	247
	Sensors	247
	Sensor Locations	248
	Instructions for Diesel Control System Head	250
	System Operation	256
	Fault Diagnosis Guide	257
	Instruments and Controls	
	Compartment Door	260
	Transmission Gear Control Lever	261
	Transmission Directional Control Lever	261
	Park Brake Button	262
	Four-Way Joystick Control Lever	263
	No 1 Two-Way Hydraulic Control Lever	263
	No 2 Two-Way Hydraulic Control Lever	263
	Control Lever Maintenance	264
	Operator's Seat	265
	Accelerator Pedal	265
	Brake Pedal	265
	Steering Wheel	266
	Brake Head Pressure Gauge	267
	Brake Accumulator Pressure Gauge	267
	Steering Accumulator Pressure Gauge	267
	Engine Start Button	268
	Air Pressure Gauge	268
	ON/OFF Toggle Switch	268
	Transmission Oil Temperature Gauge	269
	Engine Coolant Temperature Gauge	269
	Horn Button	270
	Emergency Fuel Shut Off Valve	270

Section 5	Electrics, Instruments and Controls (cont.)	
	Instruments and Controls	
	Engine Service Hour Meter	271
	Air Cleaner Service Indicator	271
	Exhaust Gas Outlet Temperature Gauge	272
	Engine Oil Pressure Gauge	272
	Shutdown System Test Valve	272
	Fuel Primer Hand Pump	273
	Attachment Quick Connects Button	273
	Emergency Intake Shut Off Valve	274
Section 6	Frame Components	
	General Description	275
	Safety Precautions	275
	Front Frame	
	Chassis	276
	Lift Arm	
	General	278
	Chocking and Bracing of Lift Arm	279
	Fork Cradle Assembly	280
	Winch Assembly	281
	Rear Frame	
	Chassis	284
	Operator's Compartment	285
	Compartment Door Assembly	285
	Canopy Assembly	286
	Operator's Seating	288
	Articulation Joint	289
	Covers	291
Section 7	Pneumatic System	
	General Description	295
	Pneumatic Schematic	296
	Safety Precautions	297
	Air Compressor	
	Compressor Mounting	298
	Compressor	298
	Air Receiver	299
	Starter Motor	302
	Safety Circuit	
	Electronic Shutdown System	303
	Make Up Head Tank Pressure	303
	Safe Start System	304
	Brake and Transmission Interlock System	305
	Operator's Horn	306
	Pneumatic System Troubleshooting	307



This document is the property of Bucyrus. SUBJECT MATTER HEREIN IS PRIVATE, CONFIDENTIAL AND RESTRICTED. Do not use, reproduce, copy, distribute or disclose except with, and only to the extent of, prior written consent of Bucyrus. PERSONS RECEIVING THIS DOCUMENT ARE RESPONSIBLE FOR RESTRICTING DISCLOSURE, except as absolutely necessary consistent with the intended use. When such is completed, return immediately to Bucyrus.

Bucyrus recommends that all Safe Working procedures should be approved and checked by Mine Officials. Bucyrus declines all liability for direct or indirect consequences of printing errors.

This document is copyright. All intellectual property rights and copyright in the document (or any part of this document) remains the property of Bucyrus. Except as provided for in the Copyright Act 1968 (Ctn) no part of this document may in any form or by any means (including without limitation electronic, mechanical, micro copying, photocopying, recording or otherwise) be reproduced, stored in a retrieval system or transmitted without the prior written permission of Bucyrus.

BUCYRUS Australia
Room & Pillar Division
20 Kullara Close, PO Box 373
Beresfield NSW 2322 Australia
Phone: +61 2 49147000
Fax: +61 2 49147059